



**INSTALLATION INSTRUCTIONS
POLARIS RANGER CREW FULL-SIZE 2014
TINTED ROOF
PART # 88-9520-T**

IMPORTANT NOTICES

READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLATION TO AVOID INJURY TO YOURSELF, DAMAGE TO THE VEHICLE OR ACCESSORY.

- For proper installation, TWO people are required.
- Torque specifications must be followed when tightening bolts. Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.
 - As specified on carton label, once protective film is removed, product cannot be returned.
- As specified on carton label, damage caused by packaging staples is not covered by warranty. All staples must be removed prior to removing product from carton.
- Failure to follow these installation instructions completely may void any warrantable components and result in product damage or personal injury.
- Do not use Loctite or any other similar fastener adhesive. These types of products react to plastics and cause cracking. Not covered by any warranty.
 - Our products are made from the highest quality material providing optimum transparency and clarity. Blurriness and/or extrusion marks may or may not appear when looking through windshield from a wide, side-angle. This is normal for all extruded clear plastic materials.
- The application of improper cleaners, abrasive and/or dirty cleaning towels can severely damage the product. Failure to follow cleaning recommendation (provided herewith) may void any warrantable components.

DEALER


These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

Parts List (parts available with kit only and not available separately)


ITEM	PART NAME	DESCRIPTION	QTY
A	Front roof part	Roof part made of 1/4" thick GE tinted polycarbonate or equivalent	1
B	Rear roof part	Roof part made of 1/4" thick GE tinted polycarbonate or equivalent	1
C	Connecting roof part	Roof part made of 1/4" thick GE tinted polycarbonate or equivalent	1
D	Front lip roof part	Roof part made of 1/4" thick GE tinted polycarbonate or equivalent	1
E	Co-extruded bulb seal	Includes: 222" Co-extruded bulb seal [end user to cut to exact length]	1
INSTRUCTION BAG	F	Foam cushion Included: 144" of 1" x 1/8" self adhesive foam cushion [end user to cut to exact length]	1
	G	Flop clamp set Includes: 3 flop clamps, 3 rubber strip pads 3/32" and 3 rubber strip pads 3/16"	1
	H	Nuts & bolts Includes: 8 metal plate hooks, 8 phillips truss head screws M6 x 20, 19 phillips truss head screws M6 x 24, 3 phillips truss head screws M6 x 40, 46 shoulder washer M6, 3 plastic washers M6, 3 rubber washers M6, 19 locknuts M6 and 3 nylon round spacers 1/2"	1

1. Installation


- a) Find a clean flat area where you can safely lay down the connecting roof part (Item C) and apply the self-adhesive foam cushion (Item F) to the recessed groove as shown below using manual pressure to ensure good adhesion and cut any excess. For proper installation, the roof must be free of any dust or any other contamination.

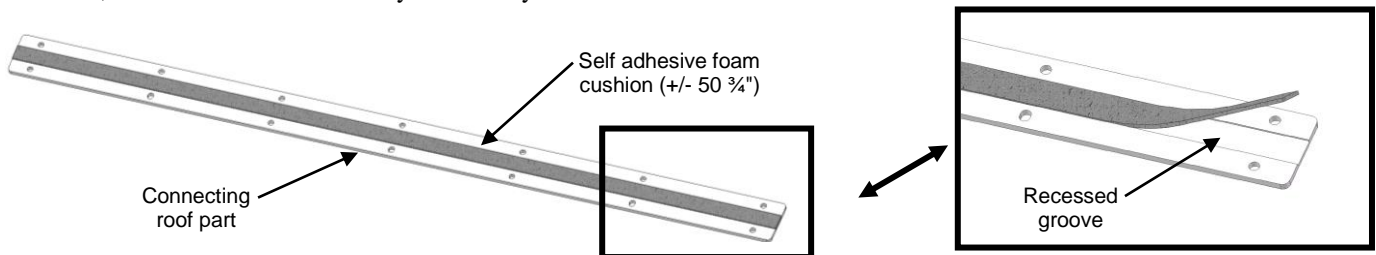


- b) Find a clean flat area where you can safely lay down the front roof part (Item A) and partially remove protective film from the back side. Precut 2 strips (2 x 21") of the self-adhesive foam cushion (Item F) and apply them to the front roof part as shown below using manual pressure to ensure good adhesion. For proper installation, the roof must be free of any dust or any other contamination.

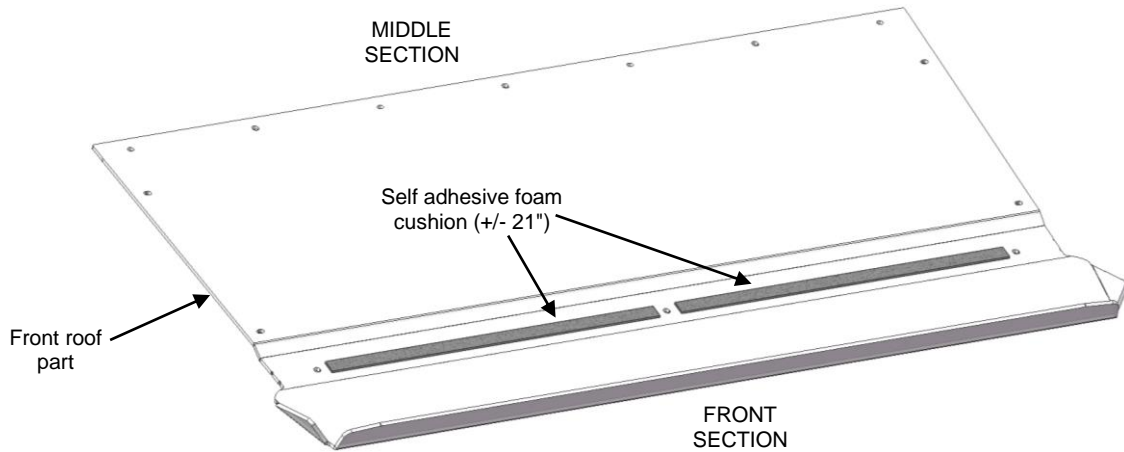

- c) Find a clean flat area where you can safely lay down the rear roof part (Item B) and partially remove protective film from the back side. Apply the self-adhesive foam cushion (Item F) to the rear roof part as shown below using manual pressure to ensure good adhesion. For proper installation, the roof must be free of any dust or any other contamination. Use the roof's side edge notches as guides to position and align the foam cushion as shown below. You must leave a free gap of $\frac{3}{4}$ " from side edges.

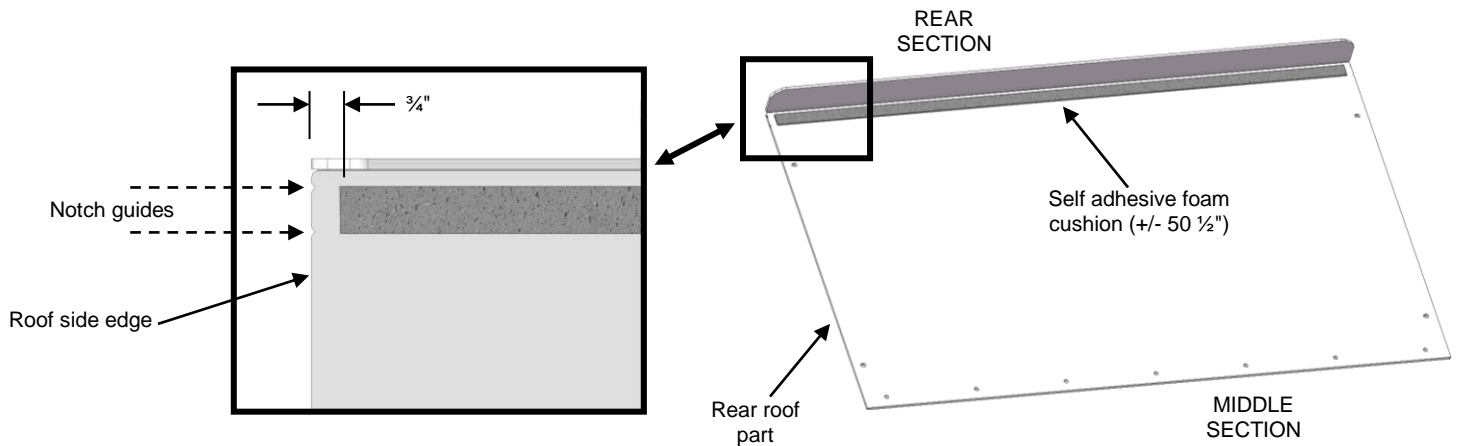


- d) Find a clean flat area where you can safely lay down the front lip roof part (Item D). Partially remove the protective film on both sides and apply the co-extruded bulb seal (Item E) to the lower lip using manual pressure to ensure good adhesion to the front lip roof part and cut any excess. **IMPORTANT! The co-extruded bulb seal MUST be fully pressed on to the roof edge or the roof will not fit properly in the roll bar channel.**

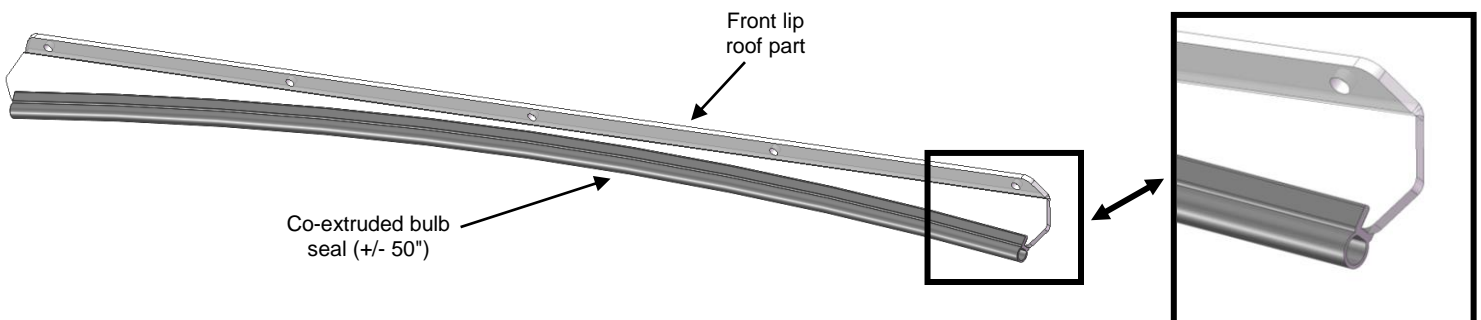


IMPORTANT NOTICES

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

- e) Find a clean flat area where you can safely lay down all the roof parts. Partially remove the protective film on both sides and assemble all parts together using supplied hardware (Item H) as shown below.

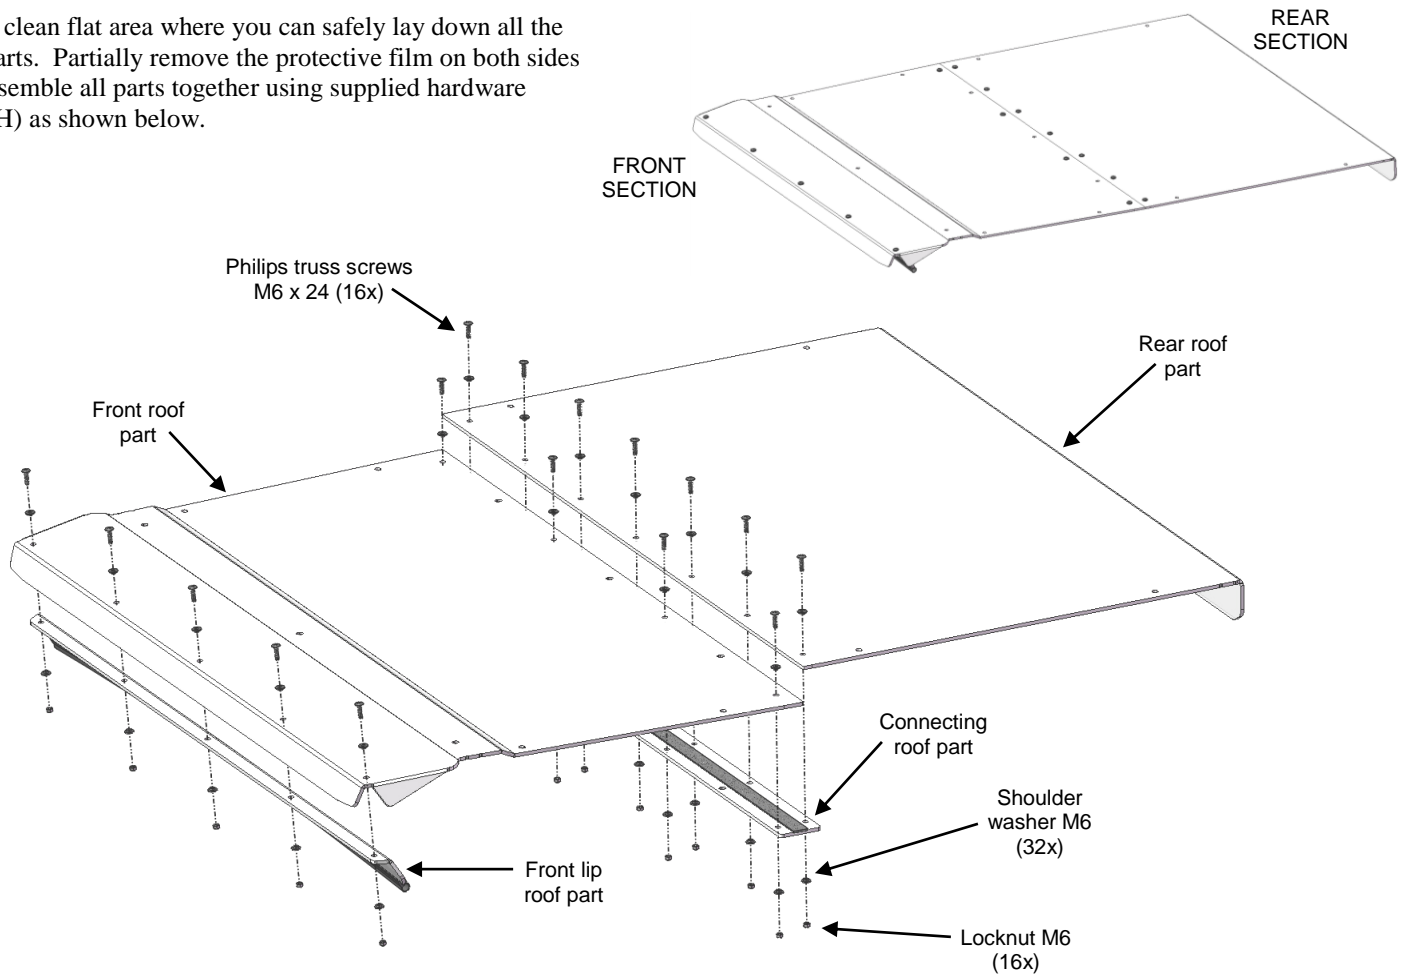

- f) Find a clean flat area where you can safely lay down the assembled roof and partially remove the protective film on both sides to apply the co-extruded bulb seal (Item E) on the roof edges using manual pressure to ensure good adhesion.
IMPORTANT! The co-extruded bulb seal **MUST** be fully pressed on to the roof edge or the roof will not fit properly in the roll bar channel.

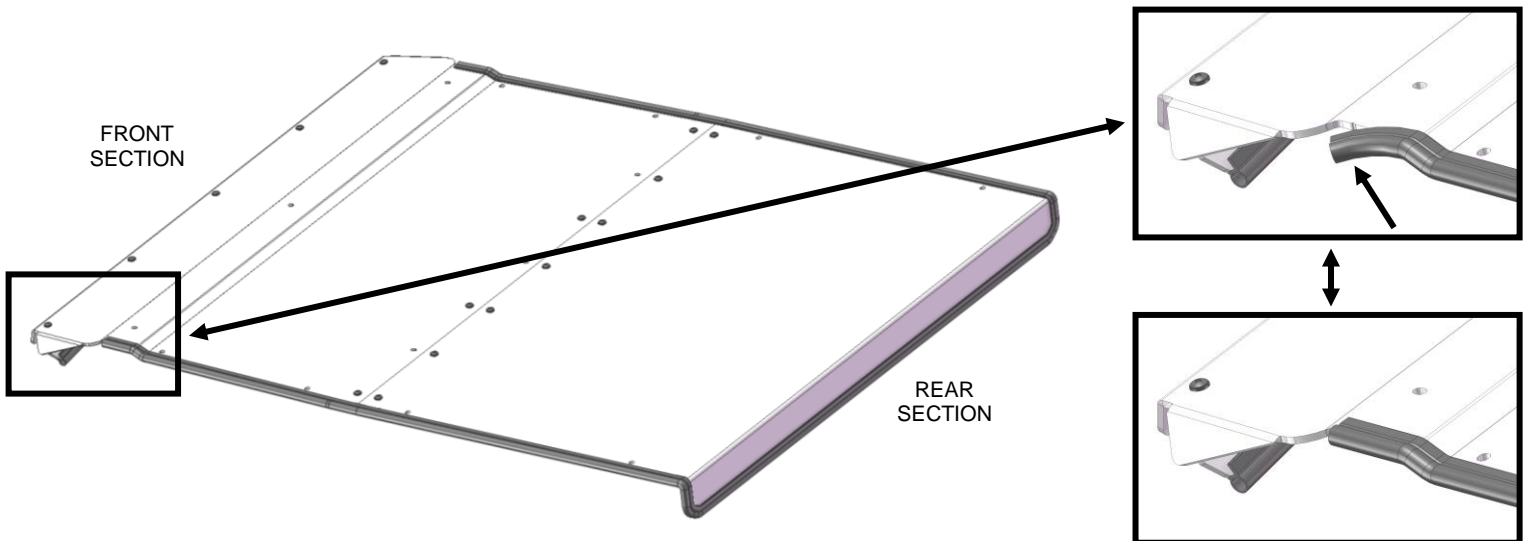


IMPORTANT NOTICES




Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

- g) **Verify "Rubber strip" chart.** If required, peel and stick the rubber strips to clamps (Items G) as shown below. Different thicknesses of rubber strips are supplied with the clamp kits in order to fit multiple tube sizes. Make sure that the proper one is used. See chart indicating which rubber strip to use for the different tube sizes. **The roll-cage tube size of your vehicle is 1 3/4"**.


RUBBER STRIP SELECTOR CHART	
ROLL BAR / ROPS DIAMETER	RUBBER STRIPS TO INSTALL
2" (2.000")	Not applicable
1 7/8" (1.875")	3/32" (0.094")
1 3/4" (1.750")	3/16" (0.188")

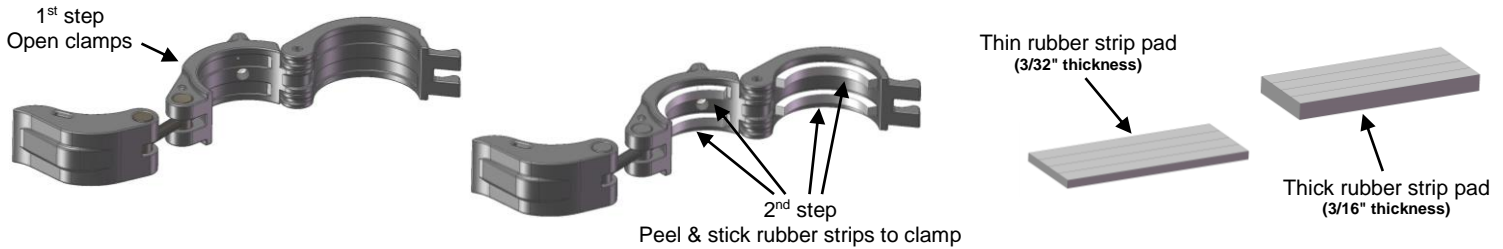

- h) Attach the clamps to the roll-cage as shown below and pre-adjust tightening tension of all clamps. **NOTE: Keep all clamp handles open as shown in step 3 below; this will allow you to move the clamps left or right when installing the roof for the first time.**

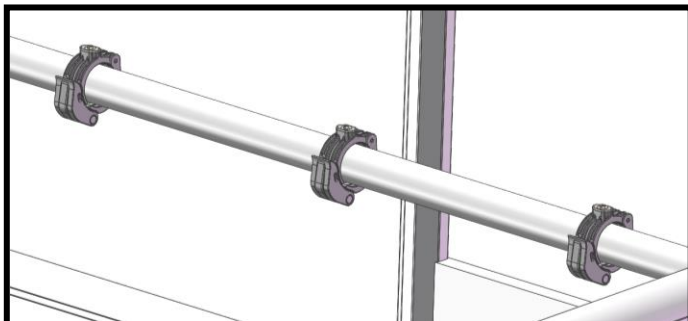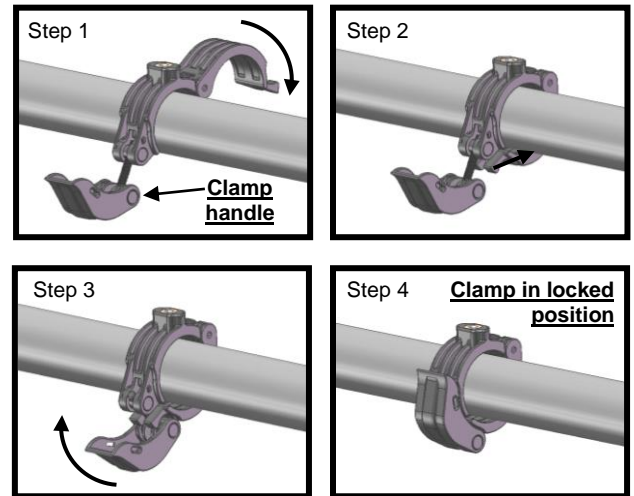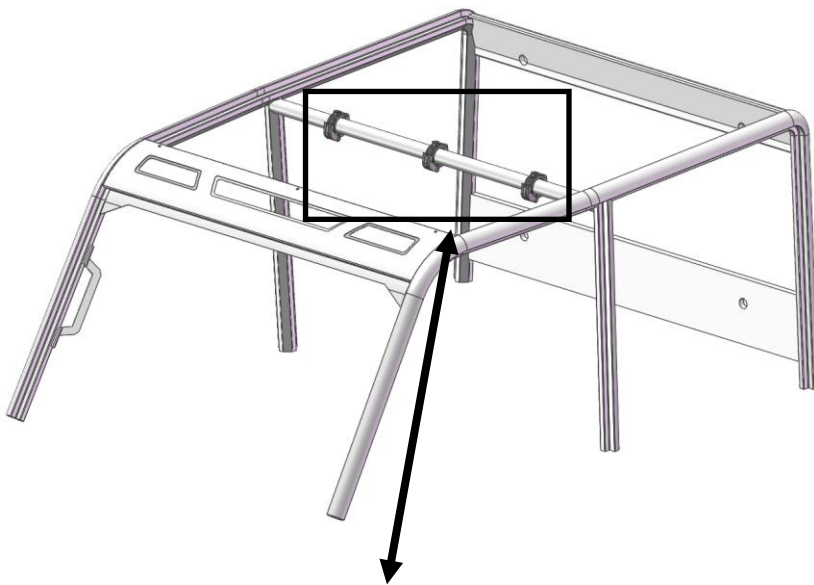


To apply more or less tension to the roll cage, simply rotate the clamp handle from the tension screw as shown below. Over tightening clamps to roll-cage could cause parts failures.

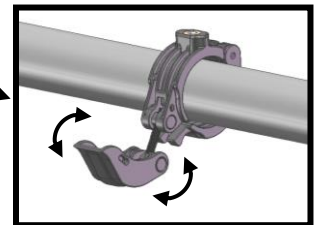

IMPORTANT NOTICES

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

- i) Install the roof to the vehicle using supplied hardware (Item H) as shown below and tighten. Note that some sections of the roll cage are hidden for better clarity.

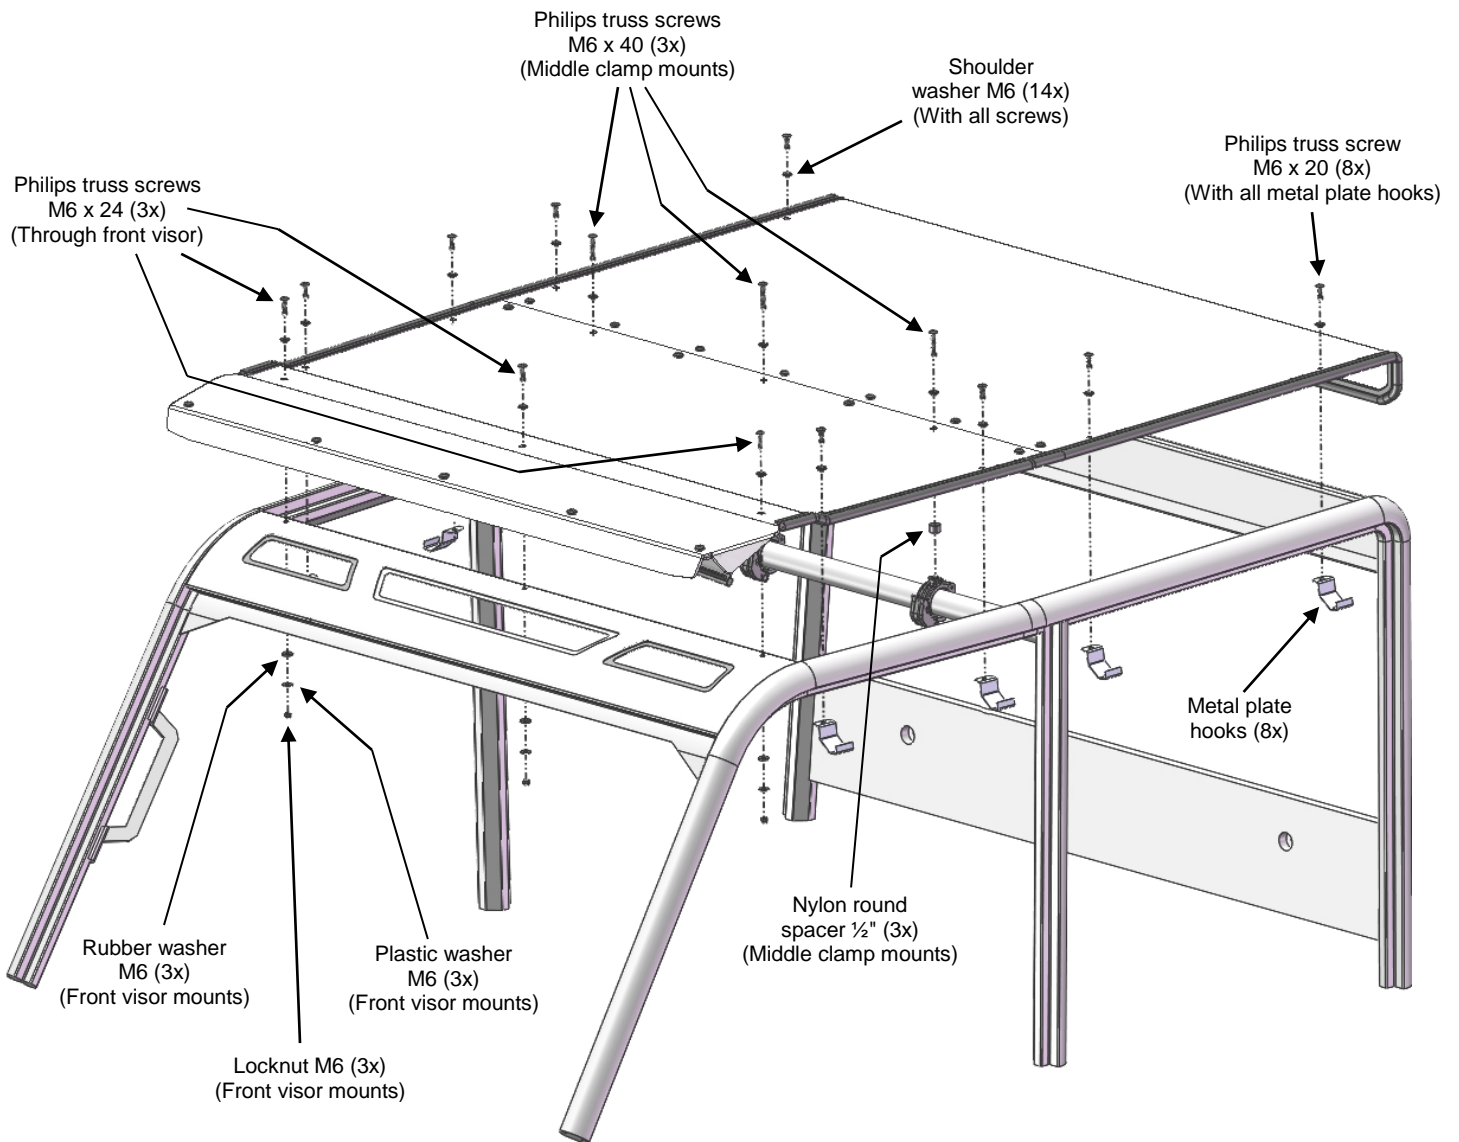

2. Maintenance and Care

Tighten all hardware after first use and periodically thereafter.

CLEANING:

- Rinse with lukewarm water; wash gently with mild soap or detergent and lukewarm water, using a soft cloth or sponge. **DO NOT SCRUB** or use brushes or squeegees.
 - Rinse again. Dry with soft cloth or moist cellulose sponge to prevent water spotting.
- To remove wet paint, glazing compound or grease, rub lightly with a good grade of VM&P naphtha or isopropyl alcohol, then wash and rinse. **DO NOT USE GASOLINE.**

NOTICE: Abusive cleaning procedures by hand washing or automated washing equipment will eventually result in visual hazing, loss of light transmission and coating delamination.

Compatible Cleaning Agents

- Aqueous Solution of Soaps and Detergents

----- Joy ----- Freon T.F. ----- Palmolive liquid ----- Top Job ----- VM&P grade Naphtha ----- Windex (with ammonia D) -----

MINIMIZING HAIRLINE SCRATCHES

For minimizing scratches and minor abrasions, mild automobile polish can be used.

Recommended products: Johnson Paste Wax, Novus Plastic Polish #1 and #2, Mirror Glaze plastic polish and Plexux1.

Testing polish on a separate Lexan sample is recommended. Be sure to follow product instructions carefully.