



**INSTALLATION INSTRUCTIONS**  
**POLARIS RZR 900/1000**  
**ROOF**  
**PART # 88-4220A**

**IMPORTANT NOTICES**

**READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLATION TO AVOID INJURY TO YOURSELF, DAMAGE TO THE VEHICLE OR ACCESSORY.**

- For proper installation, **TWO** people are required.
- Torque specifications must be followed when tightening bolts. Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.
- As specified on carton label, damage caused by packaging staples is not covered by warranty. All staples must be removed prior to removing product from carton.
- Failure to follow these installation instructions completely may void any warrantable components and result in product damage or personal injury.
- Do not use Loctite or any other similar fastener adhesive. These types of products react to plastics and cause cracking. Not covered by any warranty.

**DEALER**


These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

**Parts List** (parts available with kit only and not available separately)

ITEM	PART NAME	DESCRIPTION	QTY
A	Roof	Roof made of 3/16" thick high dense polyethylene	1
INSTRUCTION BAG	B	Roof seal	1
	C	Nuts & bolts	1
		Includes: 40" Co-extruded bulb seal (side bulb #260) [end user to cut to exact length]	
		Includes: 2 phillips truss head screws M6 x 24, 2 phillips truss head screws M6 x 40, 2 plastic shoulder washers M6, 2 plastic washers M6, 2 locknut M6 and 2 round spacers 1/2"	

**1. Installation**

- a) Remove the 2 upper OEM mounting screws from the roll cage OEM plastic visor as shown below and discard. **(Leave the OEM threaded clip nuts in place)**
- b) Temporarily loosen the 2 front OEM mounting screws from the roll cage OEM plastic visor as shown below. **(Do not remove them completely)**

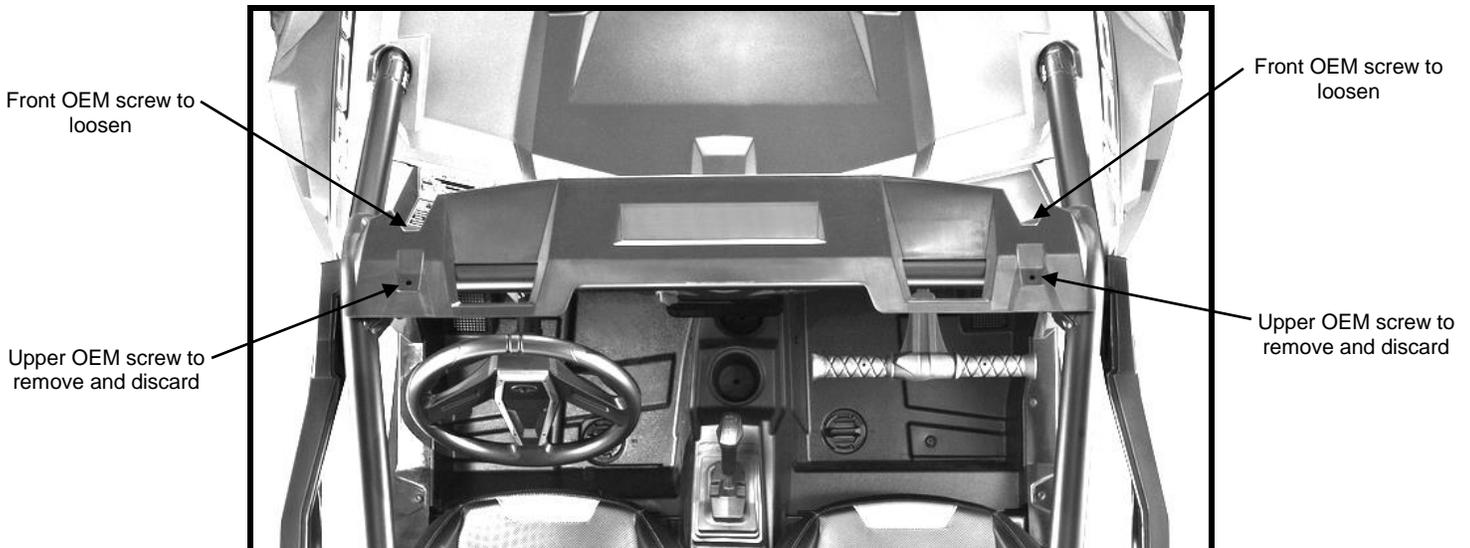


- c) **ROOF SEAL (Item B) INSTALLATION.** Roof seal install may require snips to trim seal upon completion of installation. Use caution as seal has steel, and can be sharp on edges. Safety glasses & gloves should be worn.

Install seal prior to roof installation.  
Seal can be started from either side of visor.




d) Install the roof (Item A) to the vehicle as shown below.

1. Slide the roof towards the front of the vehicle as shown on image A.

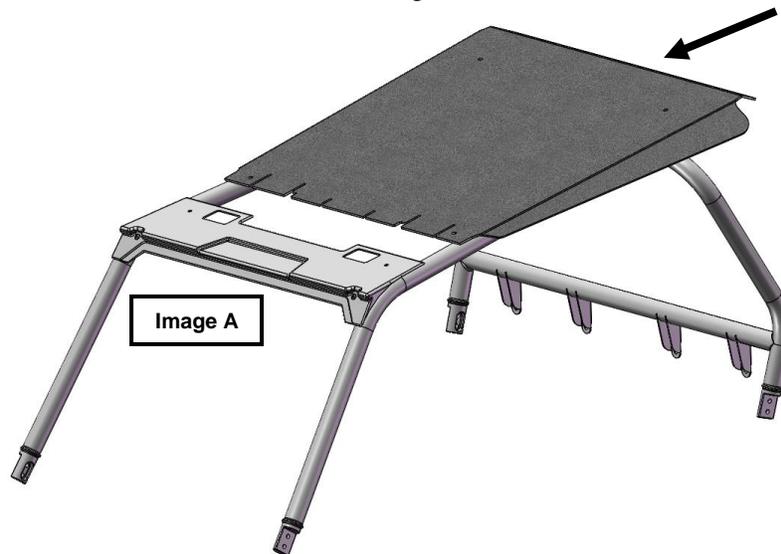


2. Make sure that the roof slides in under the OEM front visor and on top of the front crossbar so that the front edge of the roof closes the front visor opening areas and slots as shown on image B & C. Having a second person sitting in the vehicle to guide the roof into location is very helpful to achieve correct roof installation.

**NOTE: If the slots in the front of the roof are not completely hidden, the roof is NOT installed correctly. (example on image D)**

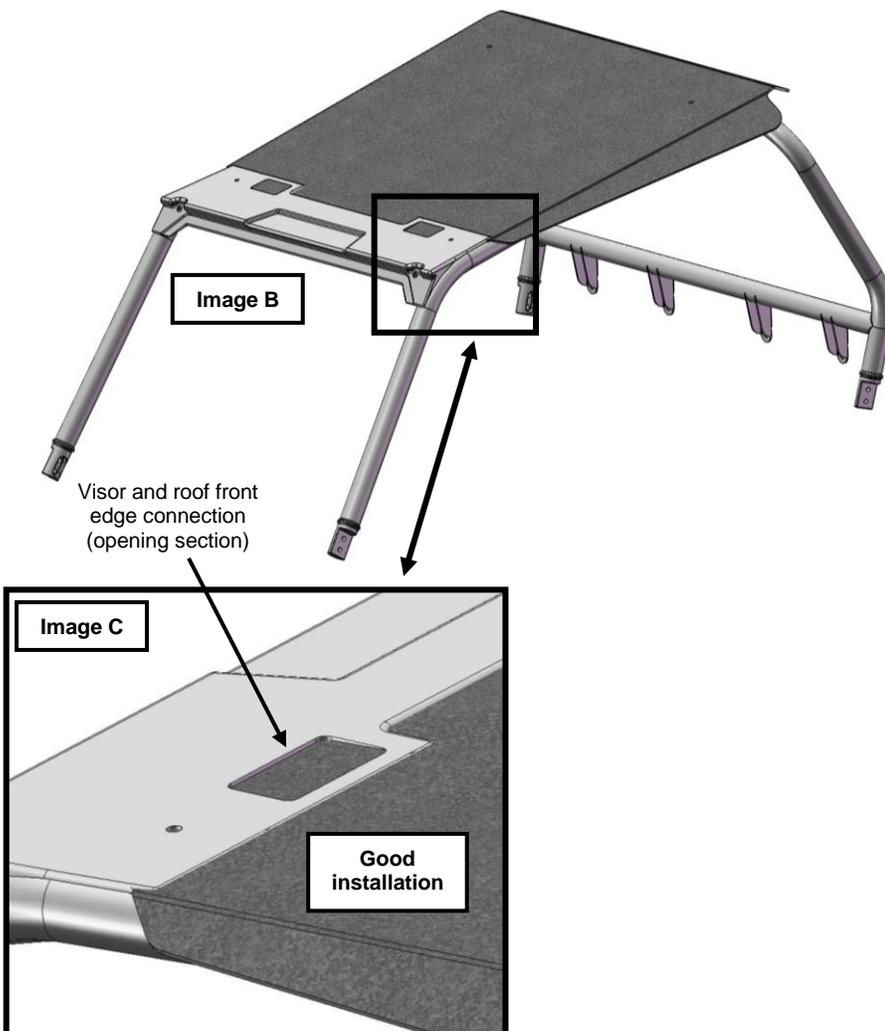

**NOTE:**  
Roof must connect with the front edge of visor opening.  
**See image C for proper installation**

**NOTE:**  
Roof slots must be completely hidden by the OEM visor.  
**See image C for proper installation**

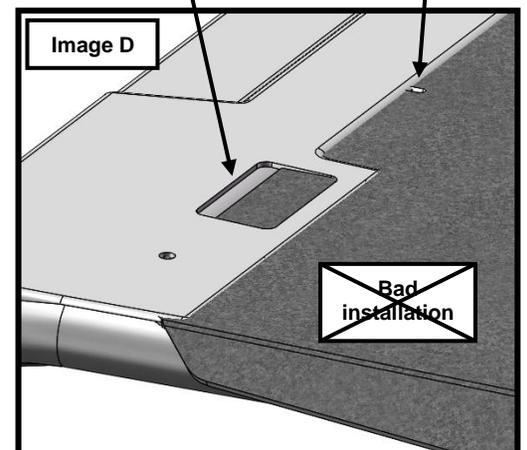

**NOTE:**  
**If the slots in the front of the roof are not completely hidden, the roof is NOT installed correctly**


# IMPORTANT NOTICES

**Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.**


e) To complete the installation, the following steps must be completed in order.

**Improper tightening procedure may cause bad fitment.**


1. Install supplied hardware as shown below WITHOUT TIGHTENING THEM.

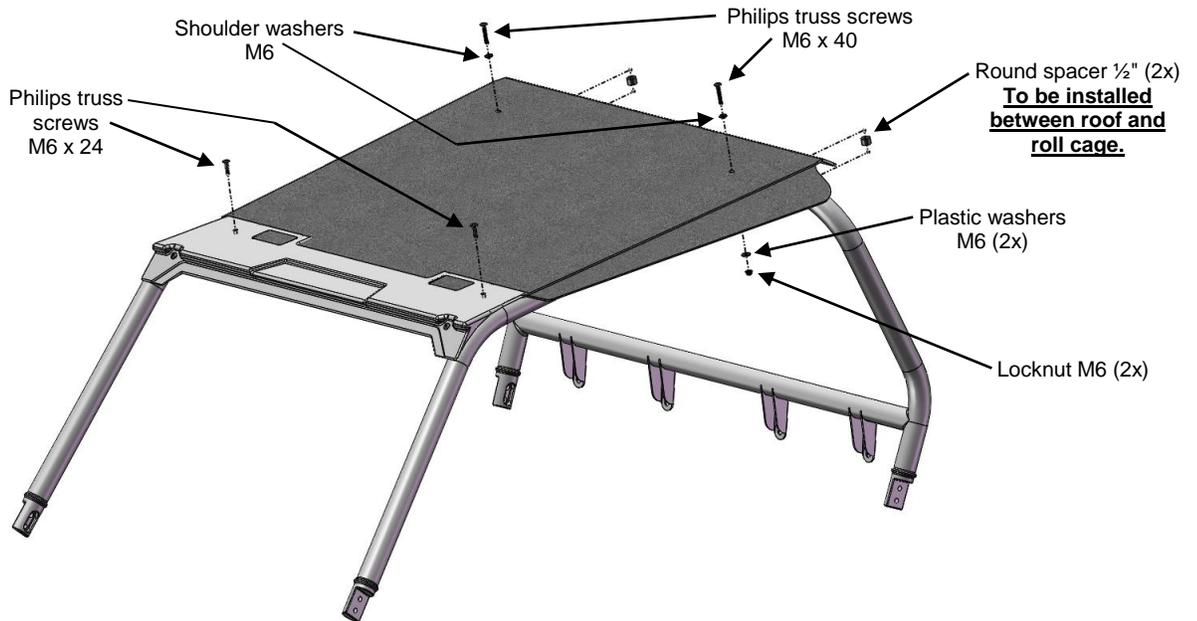


2. **MAKE SURE** that roof is **PROPERLY** positioned with the front visor (as shown in step d) and start tightening **ONLY** the front upper mounting screws M6 x 24 (2x) as shown below. This will make sure that the fit between the roof and the front visor will not move when tightening following mounting point.

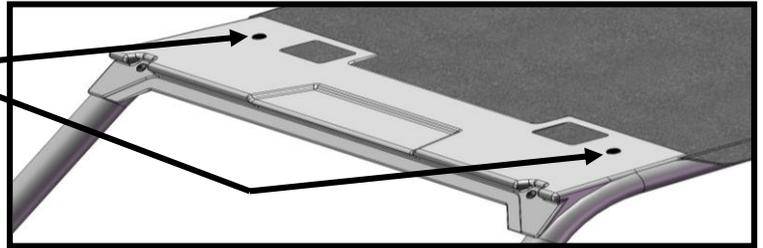

3. Then, tighten the 2 front OEM mounting screws that have been loosened in step b.

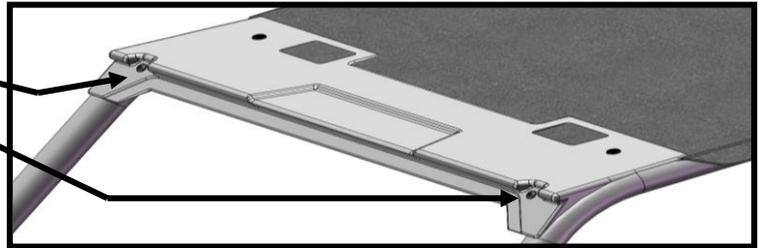

4. Finally, tighten the 2 rear mounting screws M6 x 40 to the roll cage.

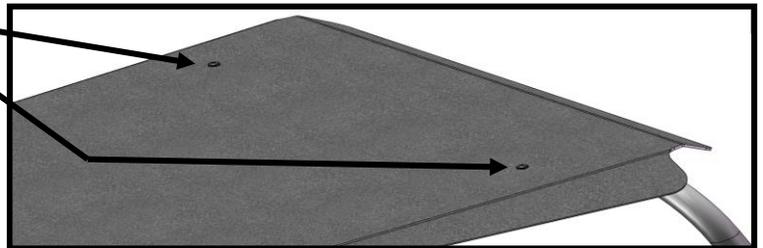

## 2. Maintenance and Care

Tighten all hardware after first use and periodically thereafter.