



**INSTALLATION INSTRUCTIONS
POLARIS RZR PRO XP
ABS (UV Resistant) ROOF
PART # 88-4600**

IMPORTANT NOTICES

READ AND UNDERSTAND THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLATION TO AVOID INJURY TO YOURSELF, DAMAGE TO THE VEHICLE OR ACCESSORY.

- For proper installation, TWO people are required.
- Torque specifications must be followed when tightening bolts. Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.
- As specified on carton label, damage caused by packaging staples is not covered by warranty. All staples must be removed prior to removing product from carton.
- Failure to follow these installation instructions completely may void any warrantable components and result in product damage or personal injury.
- Do not use Loctite or any other similar fastener adhesive. These types of products react to plastics and cause cracking. Not covered by any warranty.

DEALER

These instructions contain important information for future reference and must be given to the customer at time of purchase or upon completion of installation.

Parts List (parts available with kit only and not available separately)

ITEM	PART NAME	DESCRIPTION	QTY
A	Front roof part	Roof made of ³ / ₁₆ " thick ABS (UV resistant)	1
INSTRUCTION BAG	B	Foam cushion (optional) Included: 72" of 1" x 1/8" self adhesive foam cushion [end user to cut to exact length]	1
	C	Nuts & bolts Includes: 4 philips truss head screws M6 x 24, 2 philips truss head screws M6 x 30, 12 washer M6 x 25, 8 rubber bushing 1" and 6 locknuts M6	1

CAUTION

Please understand that open trailer towing can result in windshield/roof damage due to high wind pressure and road debris. Towing at Highway Speeds (75+ mph) for EXTENDED periods (over 100 miles) causes constant and extreme pressure at the mount areas, and is not recommended. Spike suggests removal of roofs/windshields if towed in these conditions-removal will also create less drag on the tow vehicle. Lower speeds (60 mph) or two-lane roads are no problem.

OPTIONAL FOAM CUSHION

The foam strip supplied with the installation instructions is optional and can be used between the roof and the roll cage to eliminate vibration noise during riding.

IMPORTANT NOTICES


Torque specifications must be followed when tightening bolts.

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

1. Installation

- a) Install the roof to the vehicle using supplied hardware (Item C) without applying final torque. Ensure that the roof is properly positioned and tighten all hardware as shown below.

Caution: over tightening any hardware could cause irreversible damage to the roof.

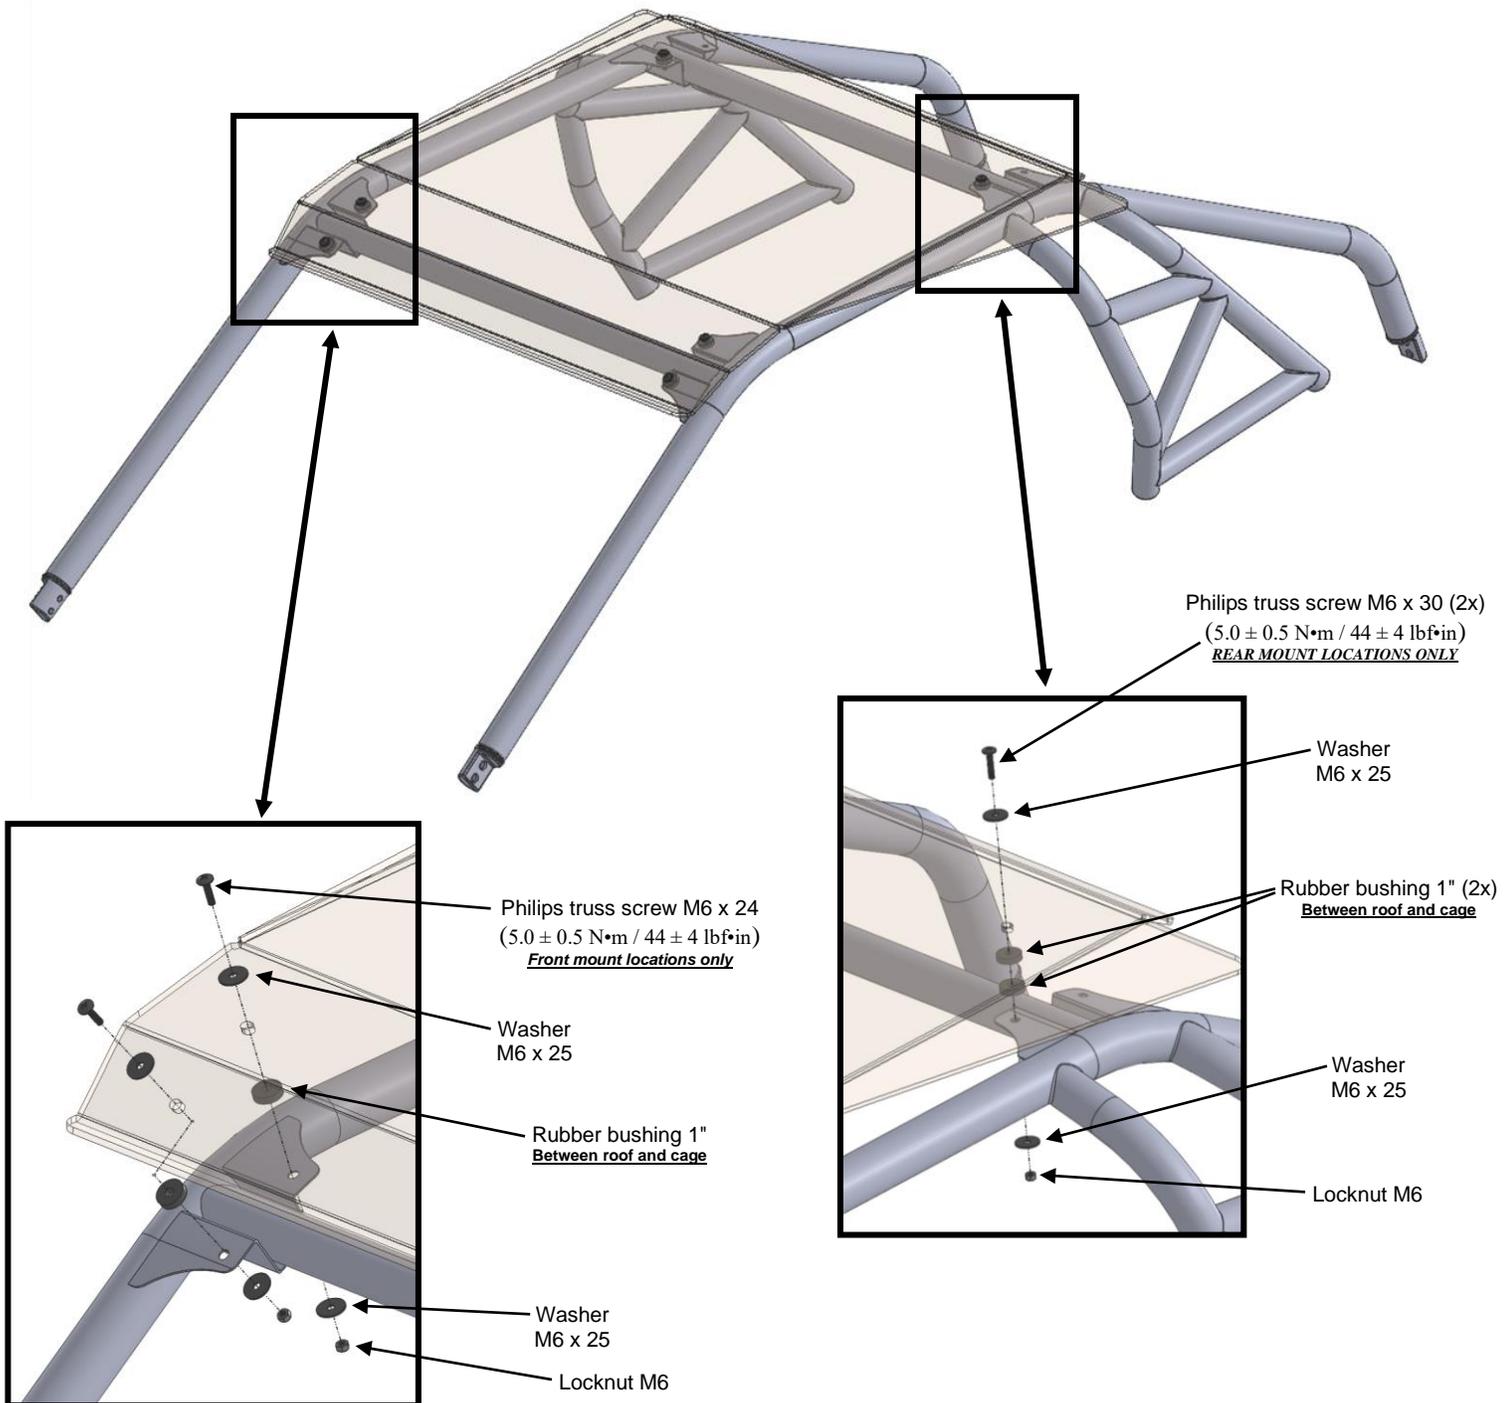

2. Maintenance and Care

Tighten all hardware after first use and periodically thereafter.